


SK-100 Web Tool Android (Bar Slide) V0.3.0 Quick Guide

Table of Contents


1.	Switch Between Standard Android and Web Tool Android	2
2.	Setup your Web Tool environment	3
3.	Log in Web Configuration Tool	4
4.	Home	4
5.	Configuration	5
6.	Wired Network	6
7.	Wireless Network	6
8.	Preference Setting	7
9.	Promotion Tool and Promotion Video	7
1.	Promotion Tool page	7
2.	Promotion Video page	8
10.	Package Manager	9
11.	Desktop Configurator	9
12.	Barcode Reader	10
13.	RFID Reader	11
14.	Modify Password	11

1. Switch Between Standard Android and Web Tool Android

The Advantage of the SK-100 Web Tool Android Bar Slide version is that you can promote the unit which contains both Standard Android and Web Tool Android systems in the same SK-100 unit. By swiping down the top-right of the screen, we can access to the SETTINGS menu like the Android mobile.

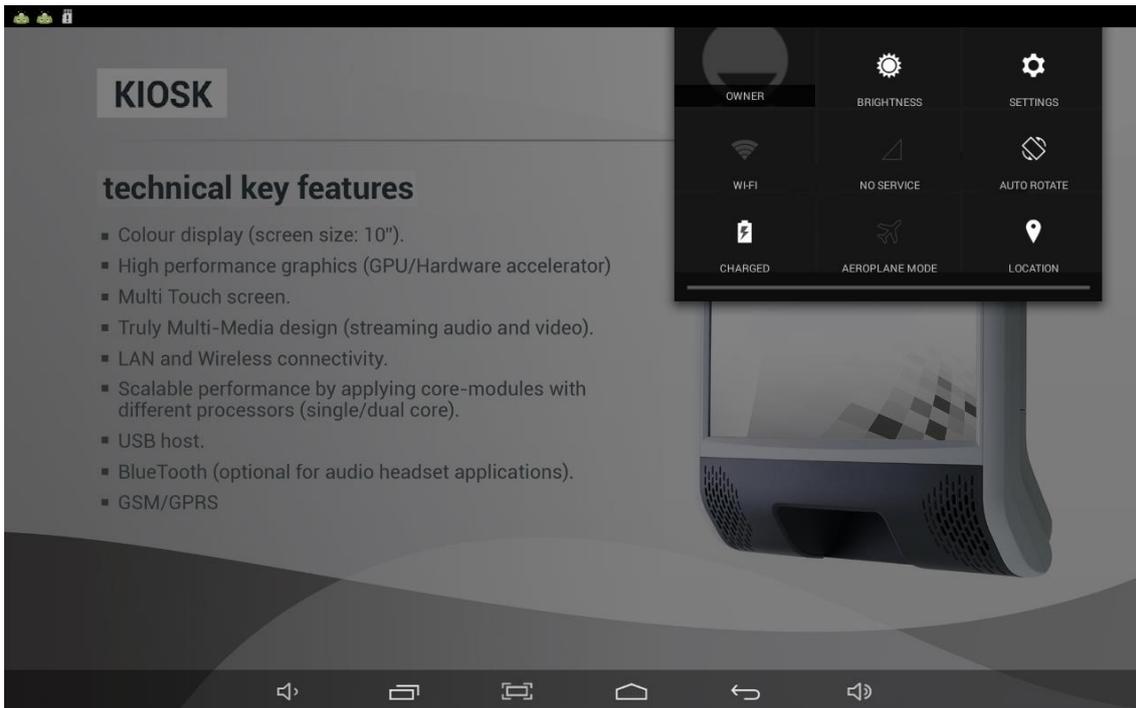

In HOME setting page, you can select “Launcher” to assign Standard Android as the default system; OR, you can select the “Web Configuration Tool” to set Web Tool Android as default. After setting, you can press  to go to Standard or Web Tool desktop.

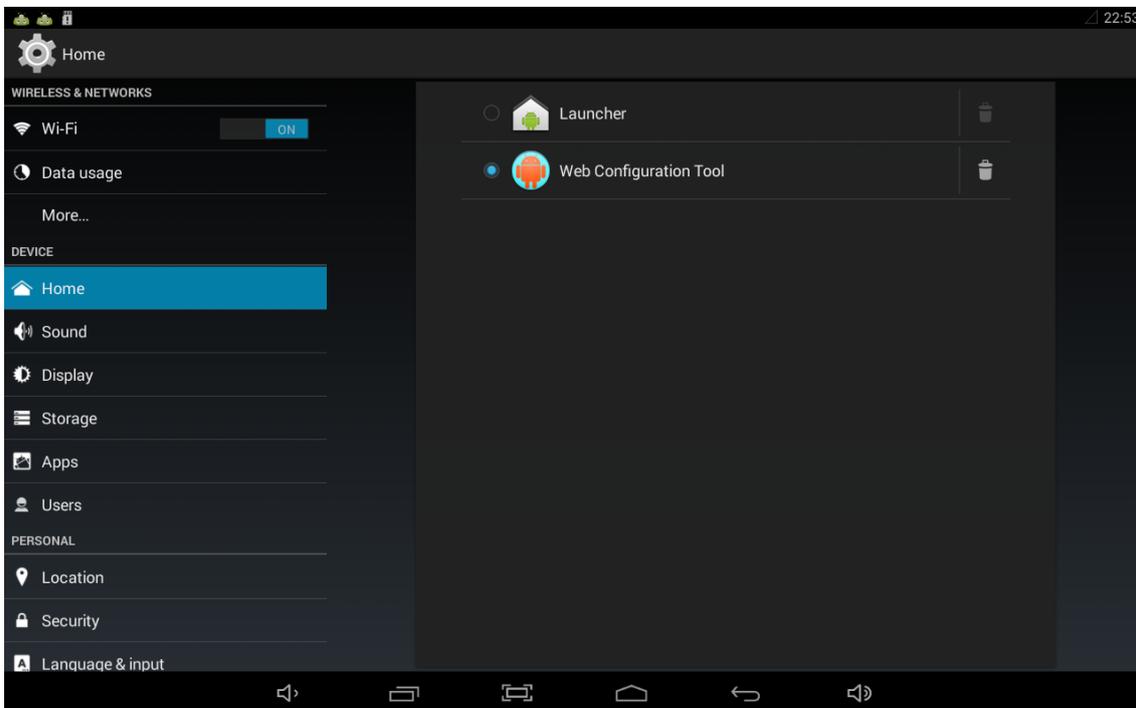

Under the Standard Android, Video, Pictures, Music, and APP are uploaded to the SK-100 unit by USB stick. On contrast, Media and APP are uploaded ONLY through the Web Tool Android’s promotion video tool and Package Manager for uploading self-developed APP.



2. Setup your Web Tool environment


Before Entering the Web Configuration Tool of the Scan Kiosk Android unit, you will need to:

1. Connect the LAN cable from your computer's RJ45 port to the RJ45 LAN port of the SK-100 unit
2. To find out the IP Address of this unit, you can tap 5 consecutive times on the touch screen to escape the promotion view. You will see your unit IP address as 192.168.1.200 on the Main Screen.

(If your unit's IP address is set-up as DHCP mode, a different IP address will be assigned and updated)

(You can also find out the IP Address by accessing the control menu under Ethernet or Wireless setting by sliding out the setting menu from the edge of the screen)

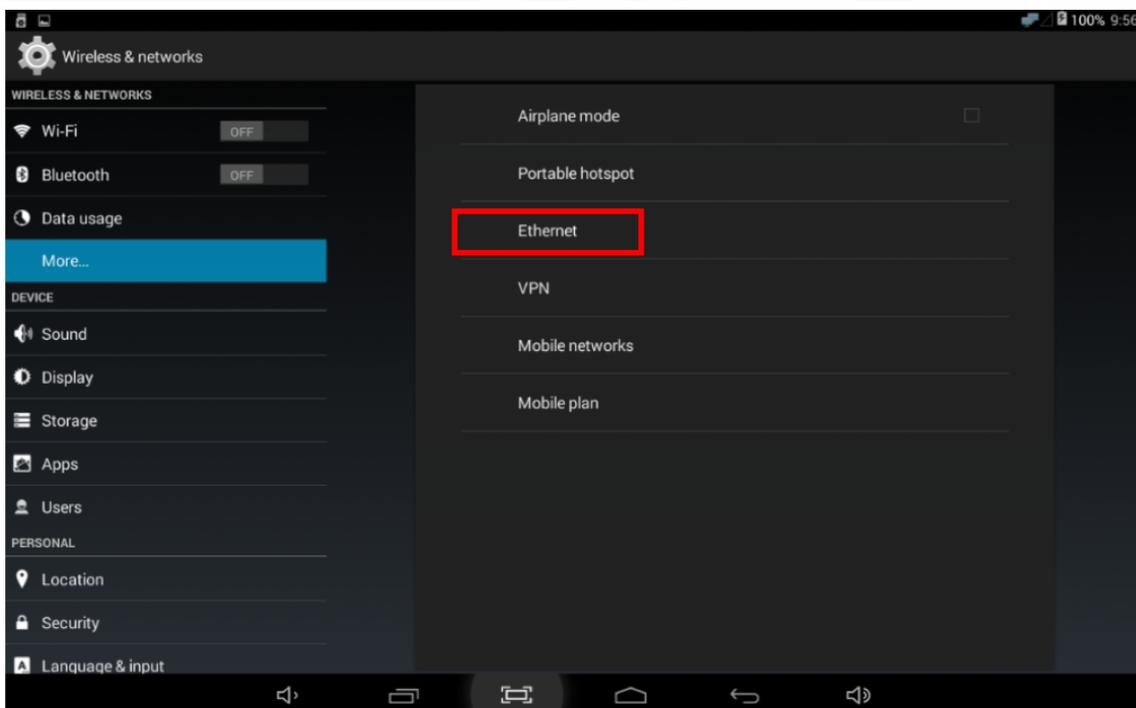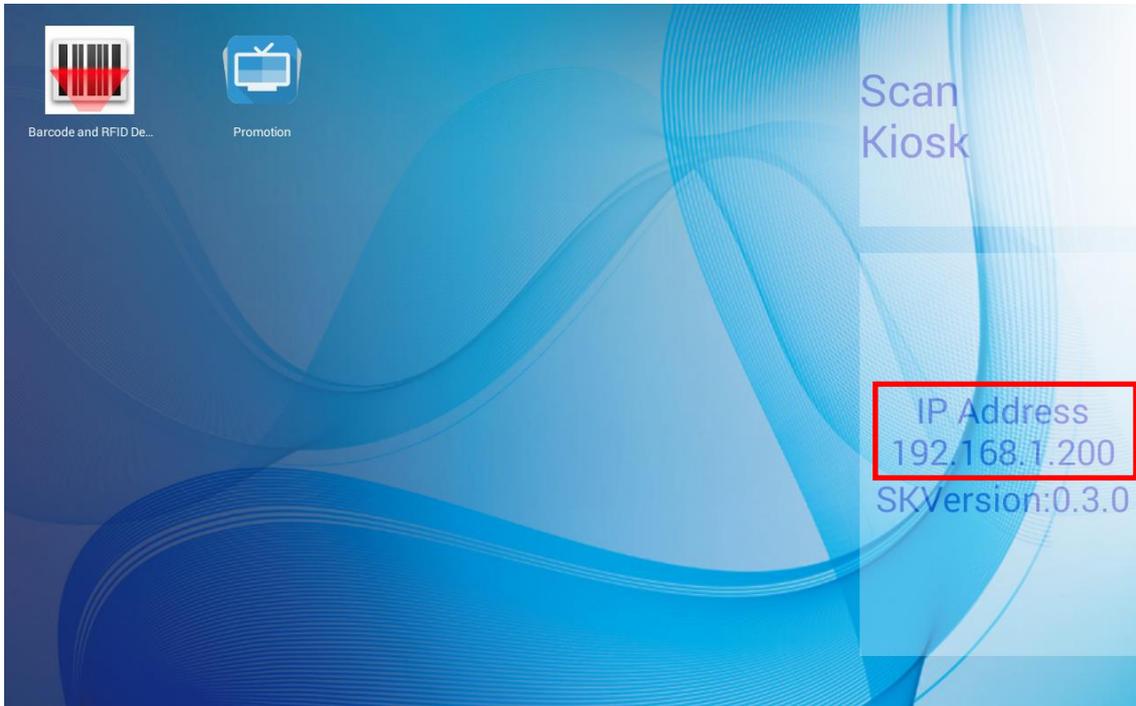


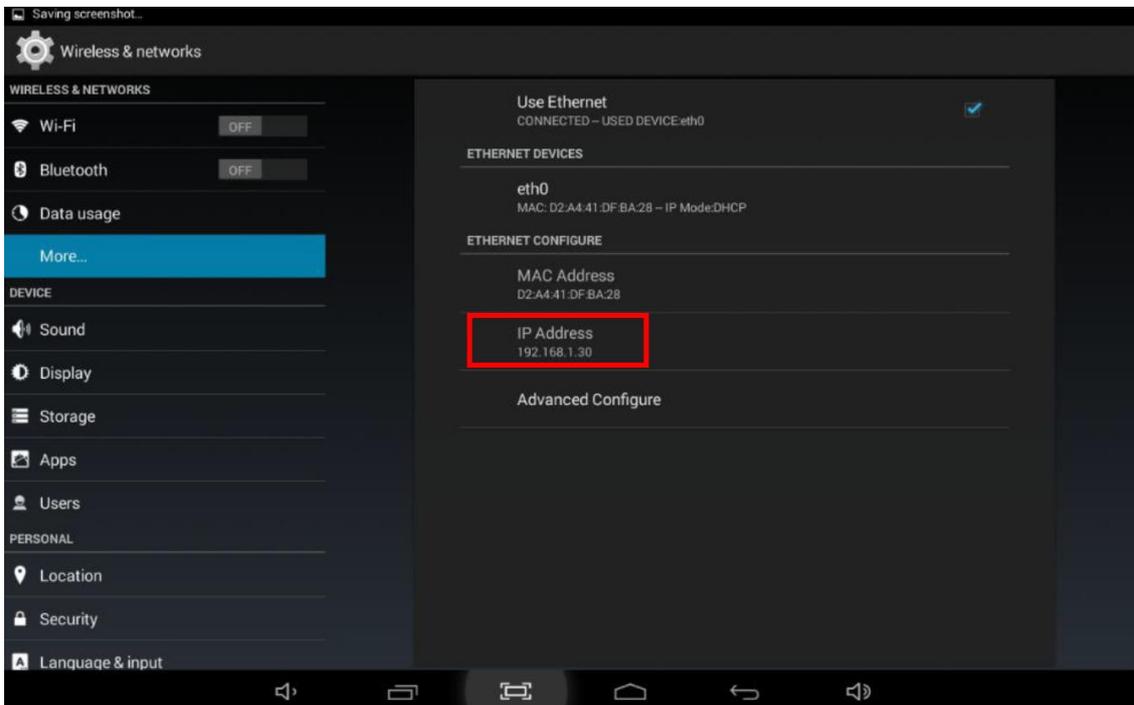

After the LAN cable is connected, please open up your web browser, entering the IP Address with “:8080” port on the web address bar, to access the web tool. (E.g. type in “192.168.1.200:8080”) **Make sure your computer is under the same IP subnet as the SK-100 you're going to configure.** E.g., the SK-100 has IP address 192.168.1.200 and your computer has address 192.168.1.250.

3. Log in Web Configuration Tool

Please type in “skadmin” for both Account and Password fields to enter the Web Configuration Tool.

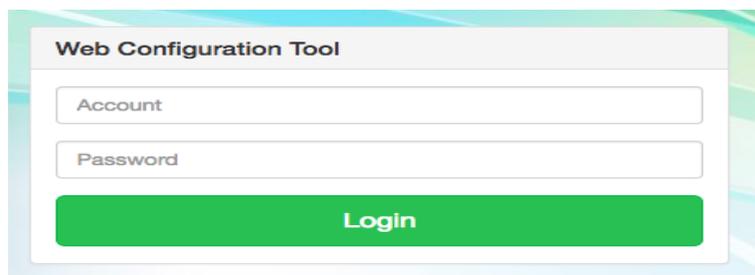

4. Home

The Home page will display Kiosk current wired (LAN)/wireless (WLAN) IP address, MAC address, time, version, and some device information.

Web Configuration Tool V0.3.0

- Home
- System
 - Configuration
 - Wired Network
 - Wireless Network
 - Preference Setting
 - Promotion Tool
 - Promotion Video
 - Package Manager
 - Desktop Configurator
- Peripherals
 - Barcode Reader
 - RFID Reader
- Modify Password
- Logout

Home

IP Address	
Wired	192.168.1.200 AA:A6:B5:08:23:1B
Wireless	*.*.*.* *.*.*.*.*

Time	
Scaniosk Time	2018-06-21 23:01:31
Current Time	2018-06-22 14:07:29

Versions	
Promotion	0.3.0
Chrome	30.0.1599.92
Price Check Setting	0.3.0

Device	
information	Device Information
location	Edit Device Location

5. Configuration

In this page, you can roll back the system to factory default.

Second, you can save desired customer setting into your PC and also upload the customer setting file under Setting Archives.

Backup or restore local setting, and select supported language preferences (Only Support English in current version).

- Home
- System
 - Configuration
 - Wired Network
 - Wireless Network
 - Preference Setting
 - Promotion Tool
 - Promotion Video
 - Package Manager
 - Desktop Configurator
- Peripherals
 - Barcode Reader
 - RFID Reader
- Modify Password
- Logout

Configuration

Language Prefencenes
Select Language <input type="text" value="en"/> <input type="button" value="Accept"/>

Factory Settings
<input type="button" value="Back-To"/>

Customer Settings
<input type="button" value="Save-As"/>

Local Settings
<input type="button" value="Backup"/> <input type="button" value="Restore"/>

Settings Archives
<input type="button" value="Choose File"/> No file chosen
<input type="button" value="Upload"/>
Download file

6. Wired Network

You can enable or disable wired network and modify related setting in this page. When the DHCP is disabled, you can manually set-up Static IP, Gateway and Subnet Mask information.

Web Configuration Tool V0.3.0

Wired Network

Enabled Enabled Disabled

DHCP Enabled Disabled

Static IP

Default Gateway

Netmask

7. Wireless Network

Wireless Network page is for setting up Wireless Network and switch on/off for DHCP. After connecting with unit, you can pre-define your WIFI SSID, password, and security type. Also, it can allow you to manually set-up Static IP, Gateway and Subnet Mask information when the DHCP is disabled.

Web Configuration Tool V0.3.0

Wireless Network

WIFI Enabled Enabled Disabled

SSID

password

Security None WPA/WPA2

DHCP Enabled Disabled

Static IP

Default Gateway

Netmask

8. Preference Setting

You can adjust Kiosk's sound volume, brightness, date, device information here.

The screenshot shows the 'Preference Setting' page. On the left is a navigation menu with options: Home, System (Configuration, Wired Network, Wireless Network, Preference Setting, Promotion Tool, Promotion Video, Package Manager, Desktop Configurator), Peripherals (Barcode Reader, RFID Reader), Modify Password, and Logout. The main content area is titled 'Preference Setting' and contains several sections: 'Audio Volume' and 'Brightness' each with a horizontal slider; 'Datetime' with a date/time input field showing '06/21/2018 11:04 PM' and a calendar icon; 'Device Information' with a text input field; and 'Device Location' with a text input field. At the bottom are 'Apply' and 'Reset' buttons.

9. Promotion Tool and Promotion Video

In these pages, you can upload/arrange the promotion materials and switch promotion mode between pictures and video.

1. Promotion Tool page

In this page, you can edit media materials and manage image playlist.

(1) Upload media materials

By clicking "Select File", which indicated by the red box, you can select the picture or .mp3 from your PC and click "Upload" to upload the material into the Media Library.

The screenshot shows the 'Promotion Tool' page. On the left is the same navigation menu as in the previous screenshot. The main content area is divided into two sections: 'Media Library' and 'Actual Playlist Items'. The 'Media Library' lists several files: image_bg1.jpg, image_bg2.jpg, image_bg3.jpg, 5029053021454.png, 4008167103714.png, 0123456.png, image1.jpg, skweb_bg.png, and sk10concept.png. The 'Actual Playlist Items' section has a 'Choose File' button highlighted with a red box, followed by 'No file chosen' and an 'Upload' button. Below these are 'Empty Playlist', 'Add New Item', and 'Apply' buttons. A table lists the items in the playlist:

#	PictureName	Animation	DelayTime	Delete
1	image_bg1.jpg	DefaultTransformer	5	
2	image_bg2.jpg	DefaultTransformer	5	
3	image_bg3.jpg	DefaultTransformer	5	
4	images:	DefaultTransformer	5	

(2) Remove material from Media Library list

If you want to delete a file on the Media library, just move mouse cursor to the filename, and then select “Delete” on the popped-up menu after right-click your mouse.

The screenshot shows the 'Web Configuration Tool V0.3.0' interface. On the left is a navigation menu with options like Home, System, Configuration, Wired Network, Wireless Network, Preference Setting, Promotion Tool, Promotion Video, Package Manager, Desktop Configurator, Peripherals, Modify Password, and Logout. The main area is divided into two sections: 'Media Library' and 'Actual Playlist Items'. The 'Media Library' section lists several image files. The 'Actual Playlist Items' section contains a table with columns for '#', 'PictureName', 'Animation', 'DelayTime', and 'Delete'. A red box highlights the 'Delete' button in the first row of the table.

#	PictureName	Animation	DelayTime	Delete
1	image_bg1.jpg	DefaultTransformer	5	
2	image_bg2.jpg	DefaultTransformer	5	
3	image_bg3.jpg	DefaultTransformer	5	
4	images	DefaultTransformer	5	

(3) Manage Playlist



1. Empty the whole playlist

You can press “Empty Playlist” to empty the items listed in the Playlist.

2. Step to add a new item:

Step 1: Press “Add New Item” button to create an empty item.

Step 2: Drag the targeted material from Media Library list to created item’s PictureName column.

4	<input type="text" value="PictureName"/>	<input type="text" value="DefaultTransformer"/>	<input type="text" value="5"/>	
---	--	---	--------------------------------	--

Step 3: Set animation and display’s delay time.


Step 4: Press “Apply” to submit the change.

3. Remove a item:

You can delete an item by click its remove icon.


2. Promotion Video page

In this page, we can upload video material and switch promotion mode between image sliding and video. After uploading the mp4, you can turn on the video mode to play your media repeatedly. Press the OFF button if you want to switch back to image sliding.

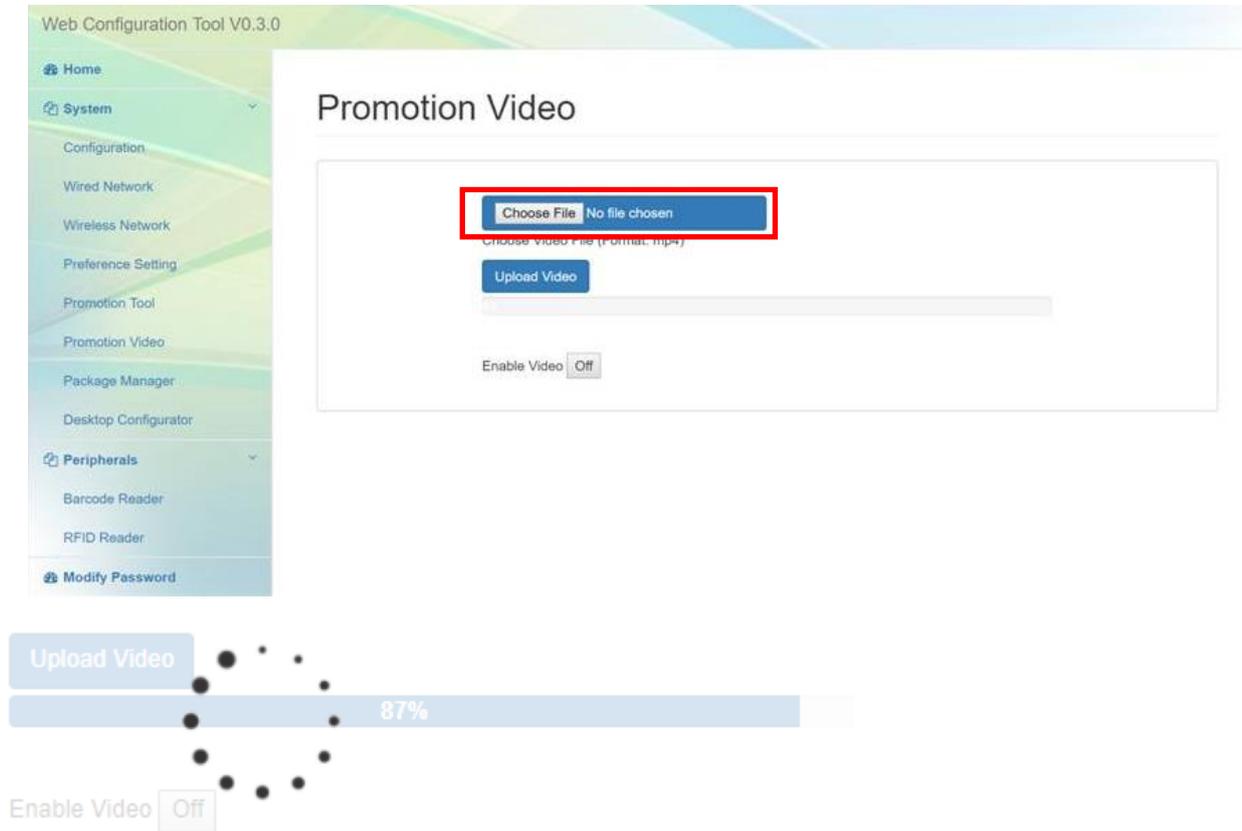

10. Package Manager

In this page, you can upload APKs from PC to install APPs. Will support FTP installation feature in the later version.

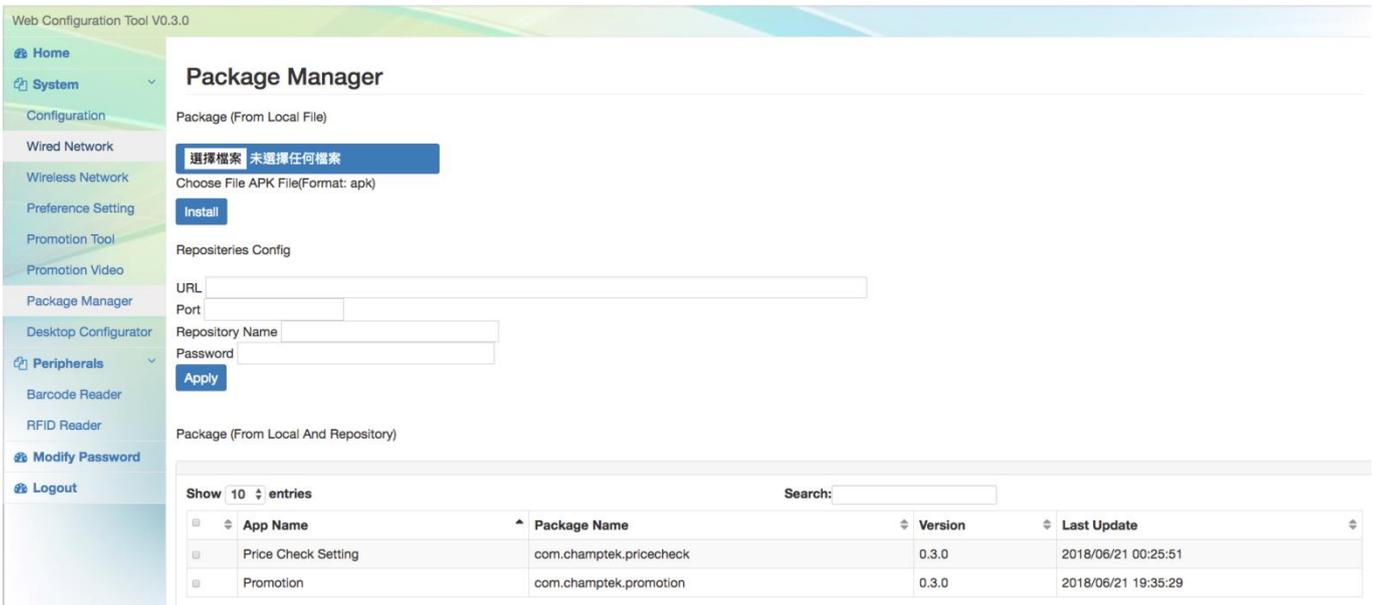


11. Desktop Configurator

You can manage app's alignment on desktop; you can also register boot time launching and delay time here for those apps.

1. Apk List: display the apps which are installed by default or from Package Manager.
2. Setting:
 - (1) Start At Boot: run the app after boot up


- (2) Start At Boot Delay: setting up the delay time for starting to run app after boot up
 - (3) Name Displayed: rename the app on the desktop
 - (4) Accept: apply setting
 - (5) Clear: remove the selected apps from the desktop and these apps will not show up on the desktop
3. Insert a new app on the desktop.
- Step1: select the location that app will be located at.
- Step2: select the app which will be inserted to desktop in the apk list.
- Step3: press button "Accept".

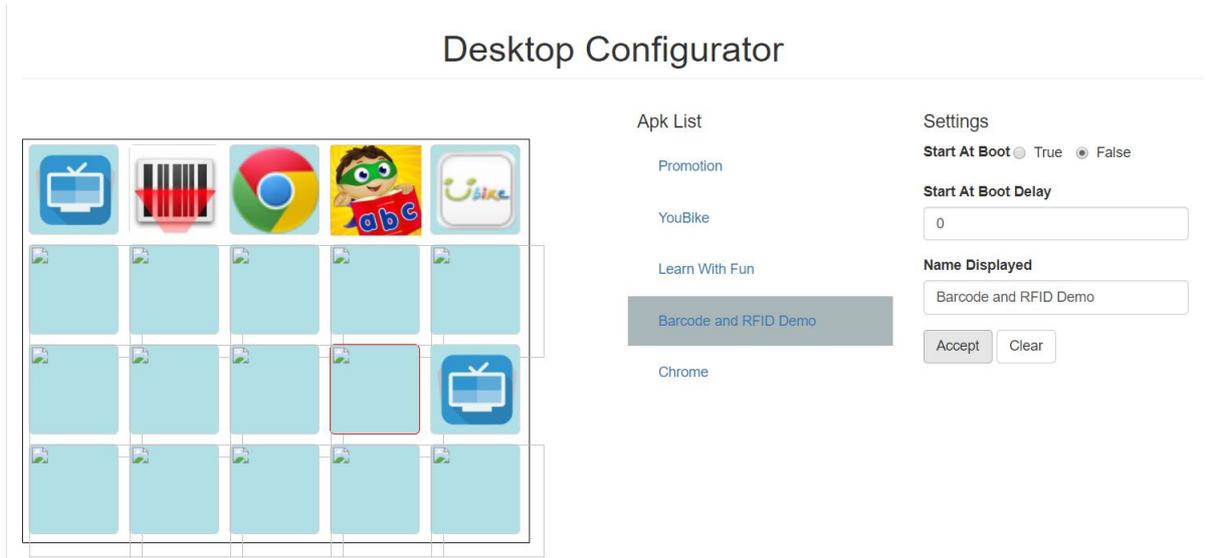

12. Barcode Reader


(turn on/off the barcodes ; Setup for Code 39 、Codabar 、 Interleaved 2of 5 Min/Fixed Length)

You can enable/disable some barcode encoders (support many 1D/2D tag) in this page.

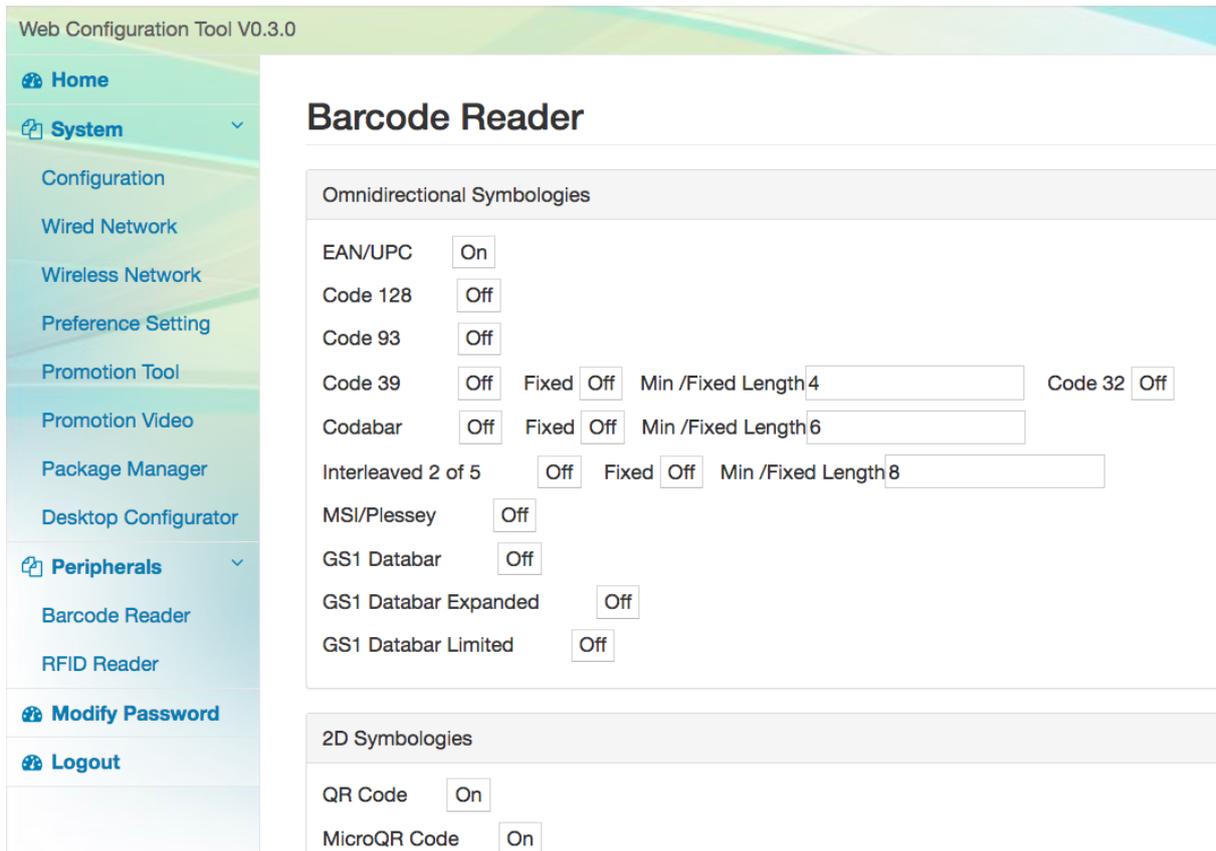

13. RFID Reader

You can enable/disable some RFID encoders in this page. (ISO/IEC 14443A, 14443B, 15693 and Felica)

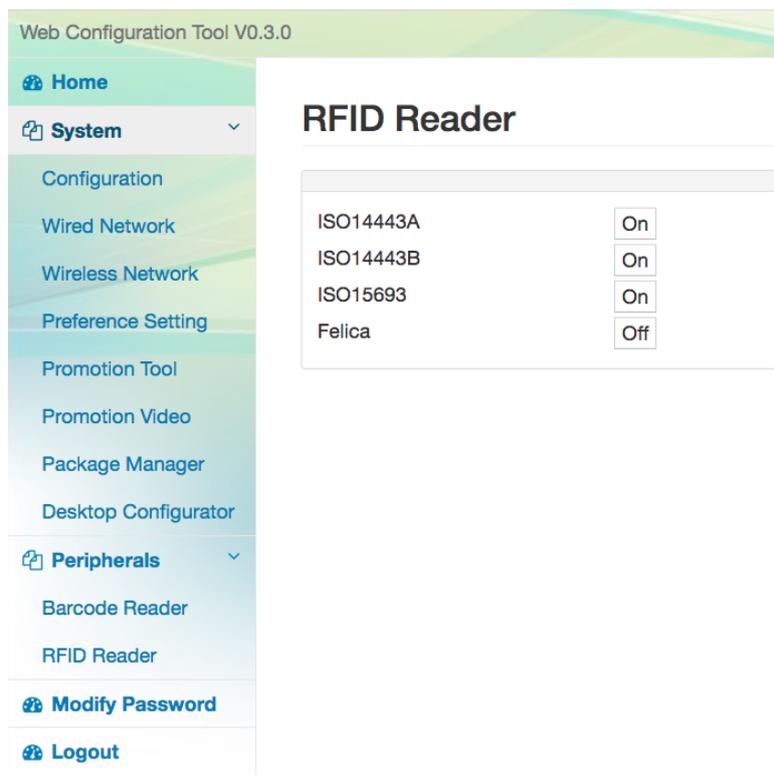

14. Modify Password

You can modify account and password in this page.

Modify Password	
Account	<input type="text"/>
Before Password	<input type="text"/>
Password	<input type="text"/>
<input type="button" value="Sure"/>	